

# TARDEC

--- TECHNICAL REPORT ---

THE NATION'S LABORATORY FOR ADVANCED AUTOMOTIVE TECHNOLOGY

No. 13840



## Evaluation of Purging Solutions for Military Fuel Tanks

May, 2003

By Dr. In-Sik Rhee

WINNER OF THE 1995 PRESIDENTIAL AWARD FOR QUALITY

U.S. Army Tank-Automotive Research,  
Development, and Engineering Center  
Detroit Arsenal  
Warren, Michigan 48397-5000

REPORT DOCUMENTATION PAGE			Form Approved OMB No. 0704-0188	
Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instruction, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (0704-0188), Washington, DC 20503.				
1. AGENCY USE ONLY (Leave blank)	2. REPORT DATE 5 February 2003	3. REPORT TYPE AND DATES COVERED Final		
4. TITLE AND SUBTITLE  EVALUATION OF PURGING SOLUTIONS FOR MILITARY FUEL TANKS			5. FUNDING NUMBERS	
6. AUTHOR(S)  Dr. IN-SIK RHEE				
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES)  U.S. ARMY TANK -AUTOMOTIVE RD&E CENTER PETROLEUM AND WATER BUSINESS AREA FUELS AND LUBRICANTS TECHNOLOGY TEAM ATTN AMSTA TR-D/210 WARREN, MI 48397-5000			8. PERFORMING ORGANIZATION REPORT NUMBER  TARDEC-13840	
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES)			10. SPONSORING/MONITORING AGENCY REPORT NUMBER	
11. SUPPLEMENTARY NOTES				
12a. DISTRIBUTION/AVAILABILITY STATEMENT  Distribution unlimited; approved for public release			12b. DISTRIBUTION CODE	
13. ABSTRACT (Maximum 200 words) Citrikleen is a terpene based solvent and its component is derived from d-limonene or pine tree. It is also a biodegradable water based solvent. Because of this property, US Army has used this environmentally friendly solvent as a purging solution in all military fuel tanks including Heavy Expanded Mobility Truck (HEMTT) for the last eight years. Recently, TACOM Logistic Assistance Representative (LAR) reported that Citrikleen solvent damages rubber seal equipped in Tank and Pump Units (TPUs), HEMTTs, and 5000 gallons of fuel delivery trucks. To clarify this problem, a seal compatibility test was conducted with Citrikleen solvents according to the ASTM D 471 test method for Rubber Property-Effect of Liquids. To draw a baseline for this evaluation, two fuel samples (i.e., JP-8 and DF-2) were tested along with Citrikleen. In addition, three more solvent were also tested to make a comparison against Citrikleen solvent. Based on the seal compatibility test results, this paper summarizes test results and findings, and re-defines Citrikleen solvent as a purging solution for military fuel tanks.				
14. SUBJECT TERMS Citrikleen solvent, Seal compatibility, Microorganism, Purging solutions, Solvent			15. NUMBER OF PAGES	
			16. PRICE CODE	
17. SECURITY CLASSIFICATION OF REPORT  UNCLASSIFIED	18. SECURITY CLASSIFICATION OF THIS PAGE  UNCLASSIFIED	19. SECURITY CLASSIFICATION OF ABSTRACT  UNCLASSIFIED	20. LIMITATION OF ABSTRACT  UNLIMITED	

## CONTENTS

<u>Section</u>	<u>Page</u>
1. Background-----	1
2. Test Samples-----	2
3. Seal Compatibility Test-----	2
4. Microorganism Survivability Test-----	5
5. Conclusions and Recommendations-----	8
References-----	8
Appendices-----	9
A. Heavy Expanded Mobility Tactical Truck (HEMTT)-----	9
B. Total Bacteria Count Agar Chart-----	10
C. Ground Precautionary Message (GPM), TACOM No. 94-02-----	11

## LIST OF TABLES

1. Test Samples-----	2
2. Volume Changes in Seal-----	4

## LIST OF FIGURES

1. O-ring Used in Fuel Tanks-----	3
2. Seal Compatibility Test-----	4
3. Activated Sludge from Wastewater Treatment Center-----	6
4. Sample Preparation for Microorganism Survivability Test-----	6
5. Microorganism Survivability Test-----	7
6. Microorganism Growth-----	8

## **1. BACKGROUND**

Citrikleen is a terpene based solvent and its active component is derived from d-limonene or pine tree. It is originally formulated with a multi-component emulsified surfactant system, and is known as an environmentally compliant biodegradable solvent. Citrikleen solvent was specially designed so that fuel/water/solvent mixture will separate (fuel and solvent/water) when using an oil/water separator. The U.S. Army Tank-Automotive Armament Command (TACOM) has approved Citrikleen as a purging solution because of its environmentally acceptable properties. For a decade, the military has successfully used this solvent for cleaning all military fuel tanks including Heavy Expanded Mobility Tactical Truck (HEMTT) Tanker shown in Appendix A. The purging procedure associated with Citrikleen has been developed and described in a General Precautionary Message (GMD), TACOM No. 94-02 that is included as Appendix C. This purging procedure is summarized as follow:

- (1) Drain all petroleum product from fuel compartments, piping, manifolds, meters, retails hoses and filter separators.
- (2) Fill all fuel compartments half way (50 %) with water. Then, add 6 gallons of Citrikleen for 2500 gallons of water or 0.24 % concentration of Citrikleen. After that, fill the tank to full capacity water.
- (3) Operate the vehicle for approximately 5 miles to agitate the solution throughout the tanker.
- (4) Drain all contaminated water using an oil-water separator at authorized hazardous waste disposal site.
- (5) Rinse fuel compartment with clean water over the oil-water separator.
- (6) Dry the fuel compartment using a compressed air for approximately 2 hours.
- (7) Inspect fuel residue until zero reading using an explosive meter.

Recently, TACOM Logistic Assistance Representative (LAR) of Ft. Bragg reported that Citrikleen solvent might have adversely affected rubber seals equipped in Tank and Pump Units (TPUs), HEMTTs, and 5000 gallon fuel tank trailers. In addition, there was a concern that Citrikleen might kill microorganism, used in waste water treatment center. To clarify these issues, the TACOM LAR requested assistance in determining whether Citrikleen solvent actually damages seal materials used in military fuel tank systems and whether its use affects waste treatment procedure. These issues were not reported before and no data was available for evaluation. Therefore, an investigation was initiated to determine if Citrikleen solvent might damage seals and upset waste water treatment processes. This paper describes the test results from seal compatibility test and bacteria survivability test, findings, and recommendations.

## 2, TEST SAMPLES

A total of eight samples were selected for this investigation. To draw a baseline for this study, two fuel samples (i.e., JP-8 and DF-2) were selected along with Citrikleen. In addition, three more solvents were selected to compare against two Citrikleen solvents (i.e., d-limonene and pine oil base). One was MIL-PRF-680<sup>1</sup> Type IV hydrocarbon solvent that contains d-limonene material, while the other one was a d-limonene based cleaner similar to Citrikleen. The last one was Starpower cleaner supplied by TACOM LAR of Ft. Bragg. The plain water was also selected to draw an additional baseline of this study. These samples are described in following Table 1.

Table 1. Test Samples

Code	Sample	Chemical Composition
S-1	Citrikleen (A)	D-limonene, Surfactant, others
S-2	Citrikleen (B)	Pine, Surfactant, others
S-3	JP-8 Fuel	Hydrocarbon
S-4	DF-2 Fuel	Hydrocarbon
S-5	MIL-PRF-680 Type IV	D-limonene, Hydrocarbon
S-6	Rip-Tide RI	D-limonene, Surfactant, others
S-7	Starpower	Proprietary chemicals, Ethylene Glycol Monobutyl Ether, others
S-8	Water	H <sub>2</sub> O

## 3. SEAL COMPATIBILITY TEST

A gasket is commonly used to seal a passageway preventing an unwanted escape or loss of fluid. Many different types of gasket materials (i.e., rubber, metal, paper, etc.) are currently using in the mechanical systems. The seal material utilized in military fuel tanks is Rubber Butadiene Acrylonitrile and is quite common for fuel systems. This nitrile rubber is known for resistance to oils and solvents. Because of this property, most military rubber specifications requiring fuel and oil resistance require nitrile base seals. Figure 1 shows O-rings currently used in military fuel tanks and identified by the LAR as being affected by Citrikleen. These O-rings are made by nitrile elastomers.

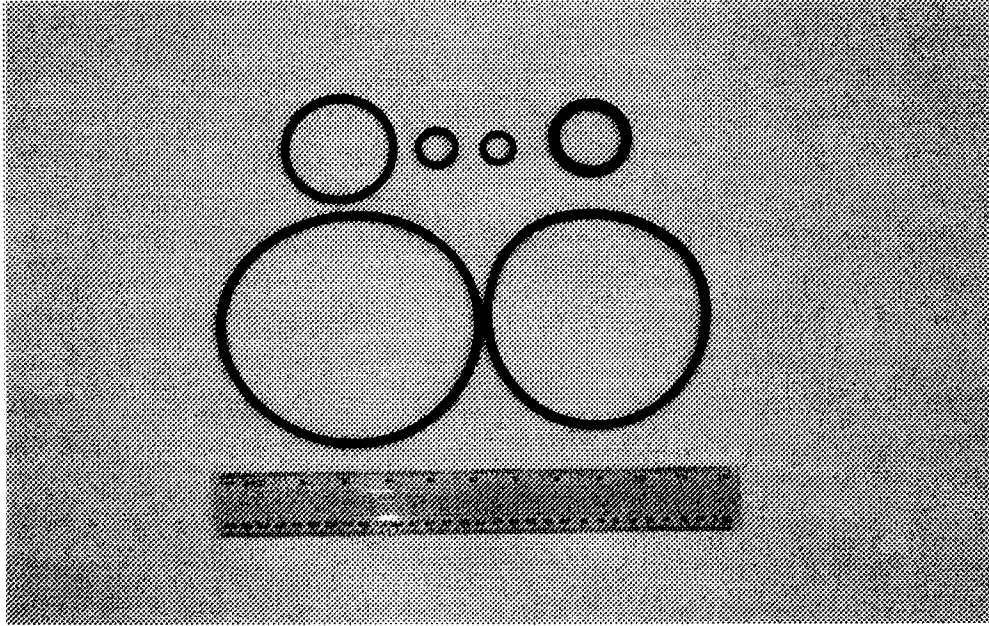


Figure 1. O-rings used in Fuel Tank

With these O-rings, a seal compatibility test was conducted with Citrikleen solvent according to ASTM D 471 test method for Rubber Property- Effect of Liquids. To simulate field environment, two different test temperatures (25 °C and 50 °C) were selected for the tests. Currently, the purging is actually performed at normal ambient temperatures. The duration of this seal compatibility test was set for 72 hours. For the test, both Citrikleen solutions (d-limonene and pine) were prepared according to TACOM purging procedure (0.24 % of Citrikleen in water). Also, the other water based samples were prepared using the military purging procedure except for fuels and hydrocarbon based solvent. Then, an O-ring was uniformly cut in small piece (about 0.5 inches in length) and immersed in the test solutions. Figure 2 shows the seal swell tests for this evaluation.

The seal compatibility test results are summarized in Table 2. Some samples were only tested at 25 °C due to their low flash points. For the evaluation, the hardness and swell changes were measured according to the ASTM D 471 test procedure. There were no hardness changes in all tested products. The test results showed that both Citrikleen solvents did not give any major seal compatibility problem with nitrile rubber. Their swell changes were very similar to the other tested products including military fuels. The test results also showed that DF-2 fuel affected the seal material more than any other samples. However, all the swell changes were within a permissible limit (10 %) specified in MIL-P-5315B specification, Packaging, Preformed, and Hydrocarbon Fuel Resistant. The concentration of Citrikleen used in the purging procedure is only 0.24 %. Such a tiny amount of Citrikleen solvent does not affect seal materials used in military fuel tanks

under normal ambient temperatures. In addition, the test results showed that any of products associated with fuel tanks (i.e., fuels, Citrikleen, water) did not have seal compatibility problem. In general, the deterioration of O-ring seals was normally found due to the seal aging or incompatibility with chemical solutions. Both cases tend to lead the leakage of O-ring seal. In this case, it appears that the seal deterioration problem observed at Ft. Bragg can be considered as an aging problem rather than Citrikleen solvent.

Table 2. Volume Changes in Seal

Test Sample	Test Temperature	
	25 °C	50 °C
Citrikleen (d-limonene)	1.0%	3.0 %
Citrikleen (pine)	3.2 %	6.5 %
JP-8 Fuel	4.3 %	NT*
DF-2 Fuel	7.1 %	NT
MIL-PRF-680 Type IV	3.7 %	NT
Rip-Tide RI	2.5 %	4.7 %
Starpower	1.7 %	2.4 %
Water	0.5 %	1.7 %

\* Not tested

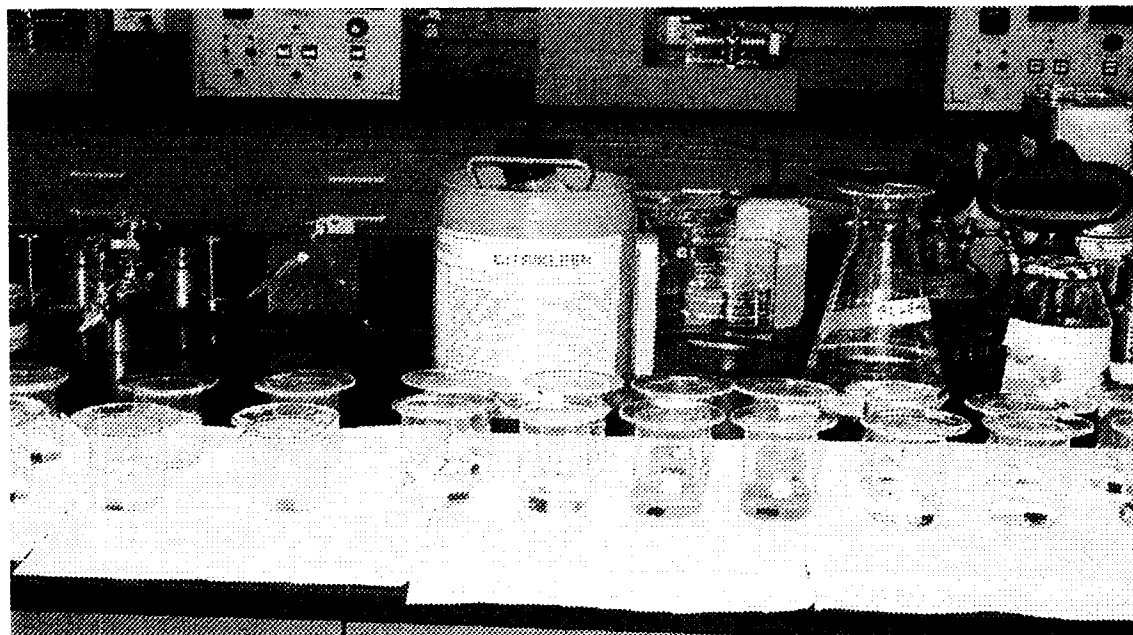


Figure 2. Seal Compatibility Test

#### **4. MICROORGANISM SURVIVABILITY TEST**

D-limonene is major component of the oil extracted from citrus rind. This natural oil is used to make many different types of products such as paint solids, orange fragrance, bug killer, and cleaners. By combining d-limonene with surfactant package, a water dilutable and rinsible solution can be made to use in the household or industrial cleaning applications. Citrikleen is one of these solutions. Recently, some military users thought that Citrikleen used in the purging procedure might harm the microorganism utilized in the domestic waste water treatment centers because d-limonene is also used to make an insecticide material to kill the bugs. But there was no documentation available to support this claim.

Wastewater treatment centers are currently using many different types of microorganisms in their biodegradation process. The microorganisms involved in biotreatment can be classified into three main groups as follow:

- Bacteria are unicellular organisms capable of living on a wide variety of organic materials. They range in metabolism from heterotrophic (living on organic carbon compounds) to lithotrophic (using inorganic compounds as sources of energy) and phototrophic (using sunlight as a source of energy). They generally reproduce by dividing into two equal daughter cells.
- Fungi are larger more complex organisms and can exist as either filamentous forms or as unicellular organisms and are larger than bacteria. They are all dependent on organic carbon as a source of energy.
- Algae are all photosynthesis organisms, which use sunlight as a source of energy and carbon dioxide from the atmosphere as a source of carbon for cell growth. These microorganisms are not used as inoculums for biodegradation processes.

The life and growth of these microorganisms often depends on the source of food chain, toxicity, and the surrounding environment. Some toxic chemicals may damage microbial cell structure and kill the microorganism. At present, the most practical way to detect this damage is to determine if microbial cell can still reproduce when exposed to a suitable environment. If the microbe is so disturbed metabolically and structurally that it is unable to multiply, then it is no longer viable. The permanent loss of reproductive capability has become the accepted microbiological definition of death.

To determine if d-limonene harm/affect microorganism used in the wastewater treatment center, a microorganism survivability test was conducted using two d-limonene based cleaners (i.e., Citrikleen, Rip-Tide RI). In addition, Starpower cleaner (code S-7) was tested to make a comparison between d-limonene based cleaner and none d-limonene based cleaners. An activated sludge sample from a local wastewater treatment center, shown in Figure 3, was also tested as a baseline of this study.



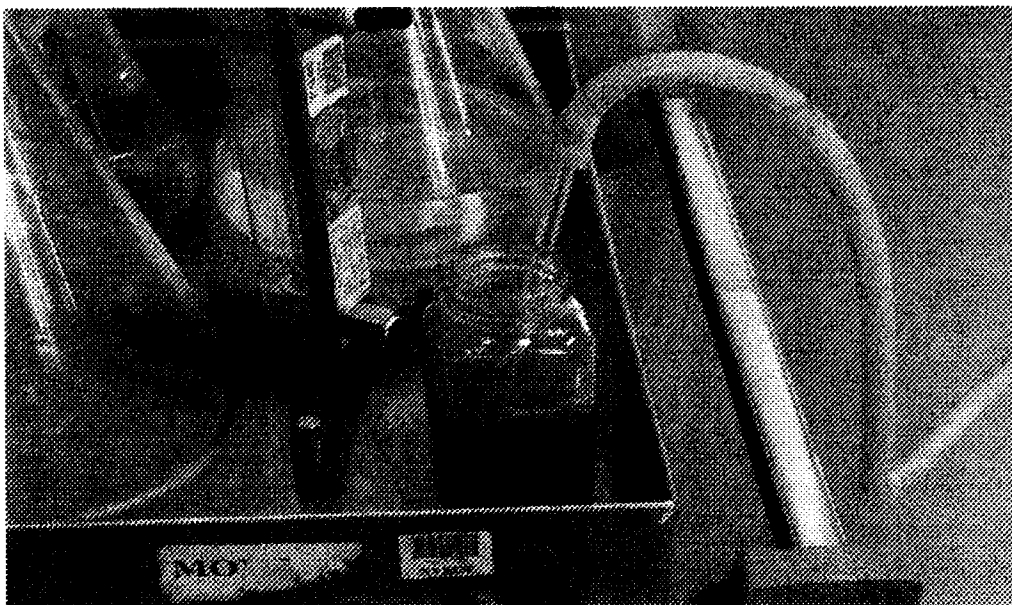


Figure 3. Activated Sludge from Wastewater Treatment Center



Figure 4. Sample Preparation for Microorganism Survivability Test

For the test, the 100 ml of test samples were prepared according to the TACOM purging procedure and the 20 ml of activated sludge was added in each test sample. This microorganism survivability test is shown in Figure 4. Then, each samples were cultured using the Easicult Bacteria Counting kit<sup>2</sup>. This test kit is commonly used for measuring the growth of bacteria in industrial process, such as cutting fluids, etc. This cultured test kit was stored in an incubator at 27 °C. After three days incubation, the bacteria were counted in compared to Total Bacteria Count Agar (TTC) Chart that was supplied with the test kit. This chart is shown in Appendix B. As a plan, the tests were conducted for three days to verify the test objective.

The microorganism growths in the test kits are illustrated in Figure 5 and the test results are shown in Figure 6. In these tests, the bacteria were counted at the beginning, one day, and third day. Both d-limonene cleaners (Citrikleen, Rip-Tide RI) tend to support bacteria reproduction from  $1 \times 10^4$  to  $1 \times 10^5$  cells, while non-d-limonene based cleaner (Starpow) decrease bacteria from  $1 \times 10^4$  to  $1 \times 10^3$  cells. The numbers of bacteria from water treatment were not changed for three days. It was also observed that Fungi slightly grew in all tested samples. These test results clearly demonstrate that the amount of Citrikleen specified in purging procedure does not harm the microorganism from water treatment center. It also showed that Rip-Tide RI cleaner tends to increase the reproducibility of microorganism. In the previous study, the biodegradability of Citrikleen was found 86.5 % in EPA 796.3100, Aerobic Aquatic Biodegradation Test.

It is reasonable to assume that Citrikleen will undergo rapid and ultimate biodegradation in aerobic aquatic environments. Both test results gave a good agreement. It appears that Citrikleen become a bacteria's food rather than harms to bacteria. Therefore, there was no evidence to support Citrikleen or d-limonene based cleaners kill microorganism from the wastewater treatment center.

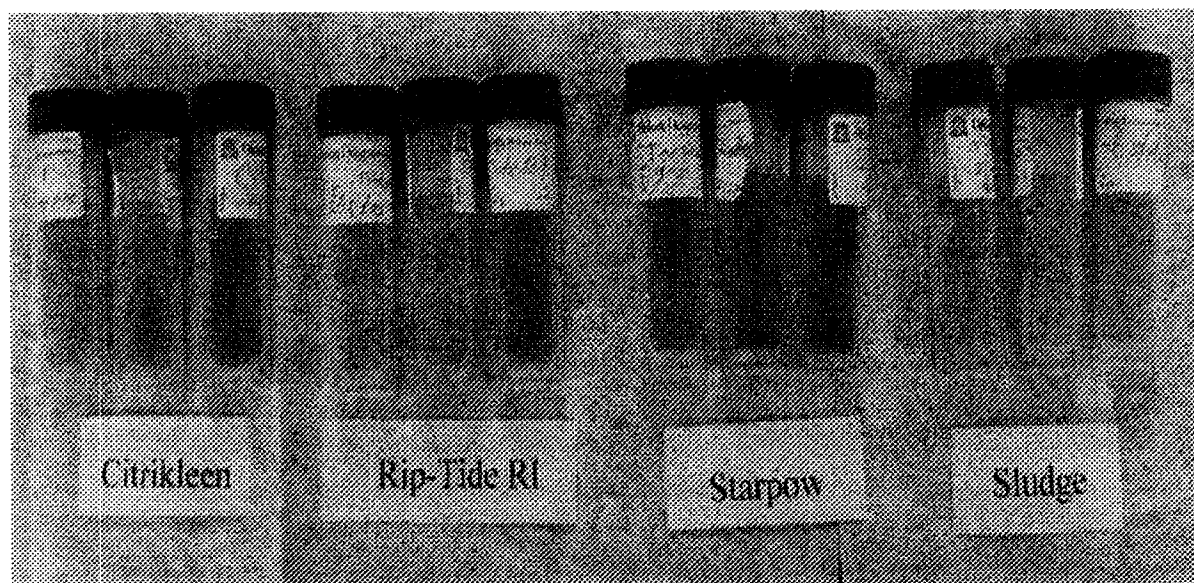


Figure 5. Microorganism Survivability Test

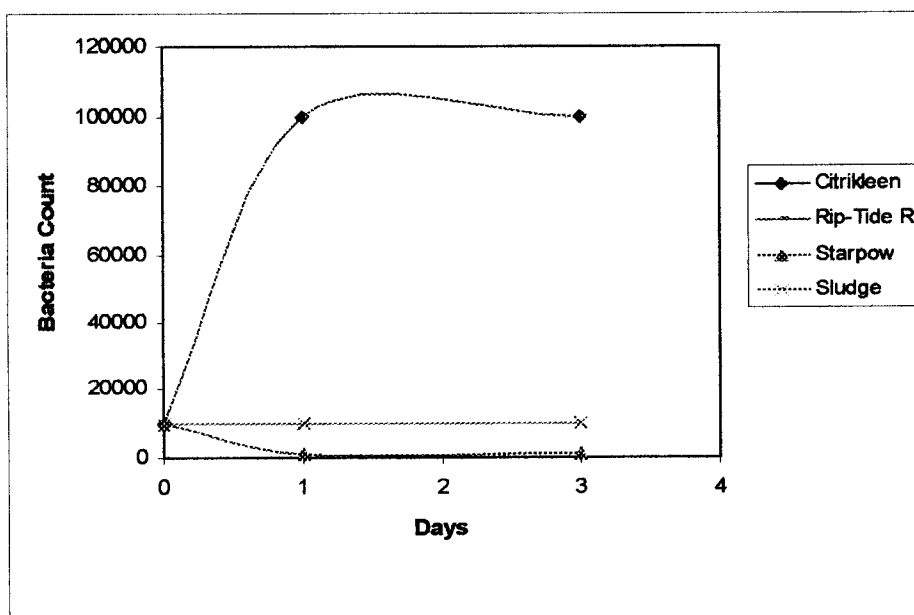


Figure 6. Microorganism Growth

## 5. CONCLUSIONS AND RECOMMENDATIONS

On the basis of the work completed to date, Citrikeen solvent does not damage seal materials used in military fuel tanks. The test results showed that the diesel fuel tended to attack seal material more than Citrikeen does, however, still within allowable tolerance. The microorganism survivability tests demonstrated that Citrikeen or d-limonene based cleaners do not harm microorganisms used in the wastewater treatment center even at the concentrations used in purging procedures. Therefore, a tiny amount of d-limonene concentration used in military purging procedure does not affect microbial life.

Based on the test results and findings, it is recommended that Citrikeen can be continuously used as a purging solution in military fuel tanks. However, a large amount of water used in the purging procedure may create environmental problem such as generation of a high volume of contaminated water. Although Citrikeen does not harm microorganisms, it must be separated from the contaminated water prior to discarding the solution to the sanitary sewer.

## REFERENCES


1. MIL-PRF-680, Degreasing Solvent, 13 December 1999.

2, Eassicult Test Kit, Orion Diagnostica Corporation.

## Appendix A. Heavy Expanded Mobility Tactical Truck (HEMTT) Tanker



## Appendix B. Total Bacterial Count Agar (TTC) Chart

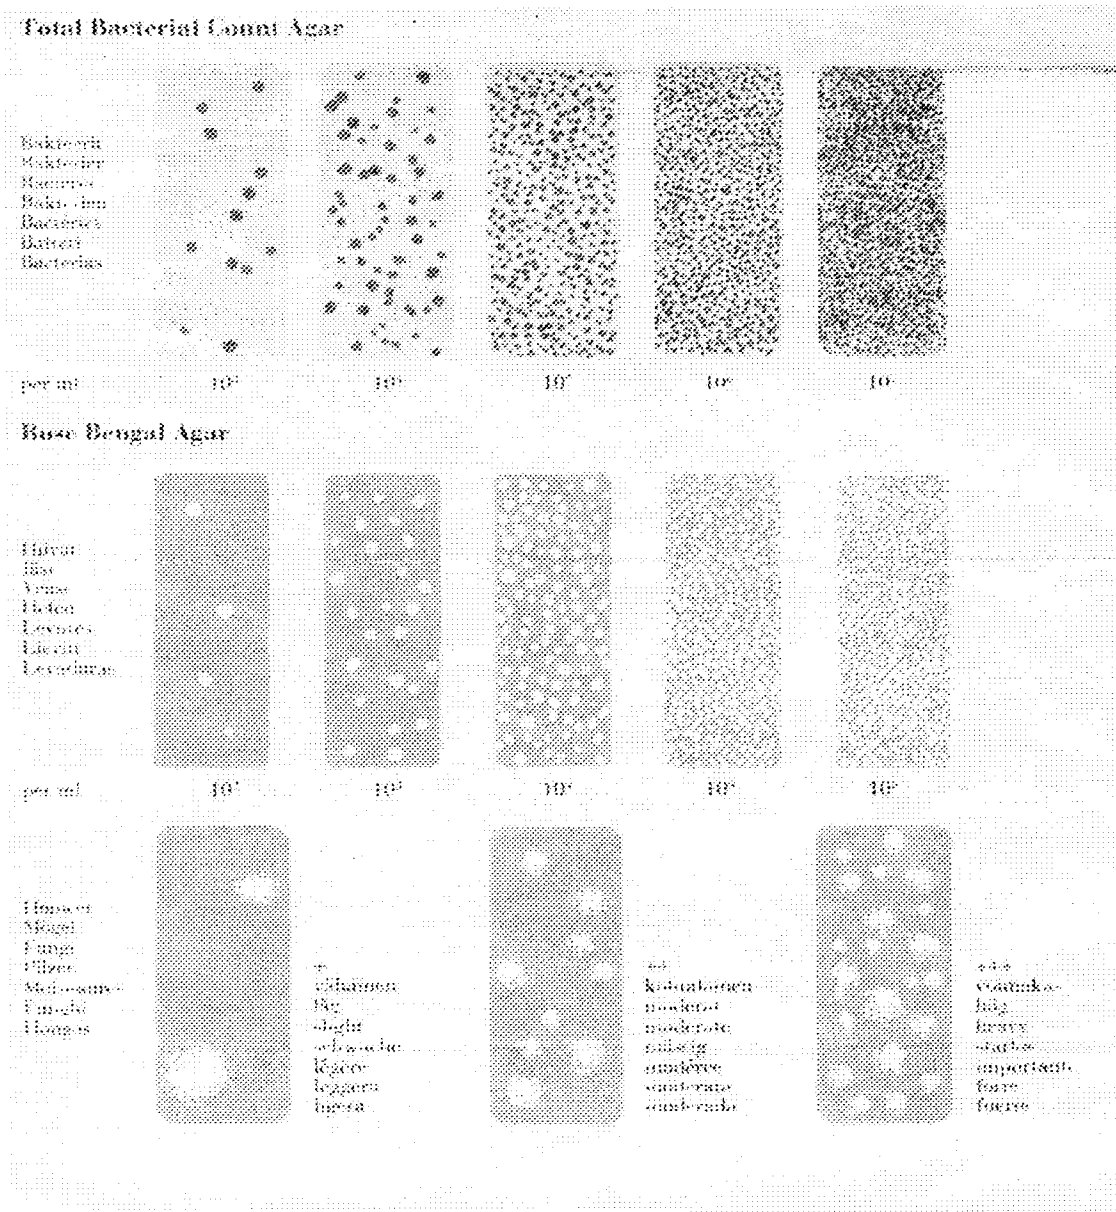

# Appendix C. Ground Precautionary Message (GPM), TACOM No. 94-02

TB 43-0001-39-1 JUNE 1994

## 2-8. GPM No. 94-02

## Ground Precautionary Message (GPM), TACOM No. 94-02

"Maintenance Advisory" for purging all fuel tankers using a biodegradable purging solution.

DATE/TIME GROUP	POC	ALTERNATE	ORGANIZATION
111944Z Feb 94	Mr. Walter Kallogg DSN 786-8300	Mr. Steve Bowman DSN 786-5717	AMSTA-MVA
Semitrailers	Commercial (810) 574-8300	Commercial (810) 574-5717	or
Tactical Vehicles	Mr. Jim Howard DSN 786-7515 Commercial (810) 574-7515	Ms. Karen Harris DSN 786-7910 Commercial (810) 574-7910	AMSTA-MTC  or
Long Term and Prepositioned Storage	Mr. Tom Burmeister DSN 786-6142 Commercial (810) 574-6142		AMSTA-GTPL  or
Quarter Master School for purging of tankers	Mr. Chris Parent DSN 539-3728 Commercial (804) 765-3728	Cpt McCaw	ATSM-CDM  or
Petroleum Center for fuels	Mr. Jim Lupori Commercial (717) 770-4230/6277		Log Read/Ops Div  or
Confined Space Restrictions	Mr. Ray Holland DSN 471-6838 Commercial (210) 221-6838		HSC-HSAP

**2-8. GPM No. 94-02 cont. PROBLEM:**

A. There are currently no instructions published for purging fuel tankers using a biodegradable purging solution, NSN 7990-01-350-7034 or NSN 7990-01-350-7035.

B. This message provides proper guidance for use and disposal of biodegradable purging solution. Failure to follow these instructions may result in vehicle damage or loss of life.

**USER ACTIONS:**

A. Connect a ground cable to the fuel tanker and drain all petroleum product from fuel compartments, piping, manifolds, meters, retail hoses and filter separator.

B. Remove filter elements and go/no go fuses from filter separator.

**NOTE**

When purging the M970 fuel tanker with a water solution it is necessary to bypass the automatic float shutoff valve. This is accomplished (after removing your fuel water separator filters) by unscrewing the pin in the center of the automatic float and placing a 1/2 inch ID x 1 1/2 inch long piece of PCV piping over the shaft of the pin and then reinstalling the pin.

C. Remove meter screen and nozzle screen. Drain all petroleum product from filter separator's water sump and close/plug all valves and ports.

D. Fill all fuel compartments half way (50%) with water. Add biodegradable purging solution using the following chart, then continue to fill the tank to full capacity with water.

TANKER CAPACITY		GALLONS OF PURGING SOLUTION REQUIRED
7500 gallon	-use-	18 gallons of solution
5000 gallon	-use-	12 gallons of solution
2500 gallon	-use-	6 gallons of solution
1200 gallon	-use-	3 gallons of solution
525/600 gallon	-use-	1.5 gallons of solution

E. Close and secure all compartment hatch covers. Close all valves. disconnect ground cable from the tanker.

- 2-8. GPM No. 94-02 cont. F. Operate the vehicle for approximately 5 miles to agitate the solution throughout the tanker.

NOTE

The purging solution can be transferred into another tanker and re-used up to "three" times. The solution is biodegradable; however, oily particles remain in the mixture. Therefore, when disposing of this solution, ensure the oil water separator is properly monitored IAW local regulatory guidance.

G. If you are not going to transfer the purging solution mixture to another tanker, position your tanker over a oil water separator at authorized hazardous waste disposal site for unit or installation.

H. Ground your fuel tanker and open all inter-compartmental dump valves. Circulate the water and biodegradable purging solution mixture through the pump, meter, fuel separator and dispensing hoses for 3 minutes.

I. Tankers with onboard pumps, do the preceding operation with onboard pump running.

J. Open all dump valves and the gravity port. Drain water/purging solution mixture over an oil water separator.

K. After all the water/purging solution mixture has been drained, rinse fuel compartments with clean water over the oil-water separator.

L. Using an explosivemeter, take a vapor reading from each fuel compartment. A vapor reading of .0 should be obtained. If the vapor reading is more than .0, open all valves on petroleum tank, including the drain valve and filter separator. Completely unroll fuel dispensing hoses and tie nozzles open. Air-dry the fuel compartments for approximately 2 hours. Continue to take vapor readings every hour thereafter until a reading of .0 is obtained.

M. When purging is complete, close all valves/ports, and replace all filters IAW the appropriate vehicle's TM.

NOTE

Before installing your filters in your M970 fuel tanker, remove the piece of PCV piping installed on the float pin. Discard the PCV piping and reinstall the pin.

---



---

---

**2-8. GPM No. 94-02 cont.**

N. To expedite the purging of your fuel tankers (approximately 20 minutes drying time), you may obtain an air dry system NSN 4140-01-306-9138 (managed by 89G) at a cost of \$2,244.91 ea, and utilize the following procedure:

1. Position petroleum fuel tank vehicle in open area away from any buildings or spark producing equipment. Ground petroleum tank vehicle. Make sure there is nothing in the immediate area that will ignite vapors being released from petroleum fuel tanker.
2. Open all valves on petroleum tank vehicle, including drain valve on filter separator.
3. Completely unroll fuel dispensing hoses and tie nozzles open.
4. Place electric (explosion-proof) blower and 8" x 15' conductive ducting close enough to petroleum fuel tanker so that the conductive ducting can reach all hatch covers.
5. Ground electric blower using grounding cable assembly.
6. Place cell duct adapter plate over fuel compartment hatch cover and ensure a tight seal is obtained. Use tape if necessary to seal compartment completely.
7. Turn on air blower and force air into fuel compartments. Check fuel compartments for petroleum fuel vapors every hour with an explosivemeter. When the explosive meter's combustible level reads .0, the fuel compartments are vapor free.

O. When purging is complete, close all valves/ports, and replace all filters IAW the appropriate vehicle's TM.

**ADDITIONAL SAFETY INFORMATION:**

A. A fuel tank is considered a confined space. You "must" comply with all applicable sections of OSHA's permit-required confined space standard, 29 CFR 1910.146, and any installation regulations before entering a fuel tank. Commanders, ensure all persons performing this operation are completely trained and knowledgeable of these requirements.

B. Installation safety personnel must inspect the job site to determine safety requirements and the necessary Protective Clothing and Equipment (PCE). PCE must be fitted and validated by medical personnel.

---

---

**2-8. GPM No. 94-02 cont.**

C. Each person must be tested and approved by installation medical personnel before entering a fuel tank.

D. 2 people are required when inspecting or repairing a fuel tank. 1 person must remain outside the tank to act as a spotter. The person entering the tank must be equipped with a harness, lifeline and respirator. Use only explosion-proof lighting (ie. flashlights) inside the tank.

E. For additional information, consult the following references:

1. FM 10-68, Aircraft Refueling.
2. AR 385-10, The Army Safety Program.
3. AR 385-55, Prevention of Motor Vehicle Accidents.
4. TB 43-0212, Purging, Cleaning and Coating Interior Ferrous and Ferrous Sheet Vehicle Fuel Tanks.
5. FM 10-71, Petroleum Tank Vehicle Operations.
6. OSHA Standard, 29 CFR 1910.146
7. TM 38-450, Storage and Maintenance of Preposition Materiel Configured to Unit Sets.
8. MIL-V-62038E(AT), Vehicles, Wheeled: Preparation for Shipment and Storage of.

F. Unit commanders, contact your local TACOM Logistics Assistance Representative (LAR) or your State Surface Maintenance Manager upon receipt of this message for assistance. If you do not know who your TACOM LAR is, for CONUS call DSN 367-6204/6298, for GERMANY DSN 370-6128/7436, and KOREA DSN 723-7519/6479. LARs are available to help you.

**TACOM/PM ACTIONS:**

A. Update applicable vehicle technical manuals.

B. Provide purging information to the field through EIR Digest article to be published in TB 43-0001-39-3. (3rd QTR CY 94)

**SUPPLY STATUS:**

Biodegradable purging solution is available in 6 gallon containers, NSN 7930-01-350-7034 and 55 gallon drums, NSN 7930-01-350-7035.

**END OF MESSAGE**

---

## DISTRIBUTION LIST

### DEPARTMENT OF THE ARMY:

CDR AMC  
1 ATTN AMCRD S  
5001 EISENHOWER AVE  
ALEXANDRIA 22333-0001

#### TARDEC

1 ATTN AMSTA TR-D  
1 ATTN AMSTA TR-E  
1 ATTN AMSTA TR-N  
WARREN MI 48397-5000

TARDEC  
50 PETROLEUM AND WATER BUSINESS AREA  
FUELS AND LUBRICANTS TECHNOLOGY TEAM  
ATTN AMSTA TR-D/210  
WARREN MI 48397-5000

CDR ARMY TACOM  
1 ATTN AMSTA IM-LMT  
1 ATTN AMSTA IM-LMM  
1 ATTN AMSTA IM-LMB  
1 ATTN AMSTA IM-FR  
1 ATTN AMSTA IM-FT  
1 ATTN AMSTA IM-KP  
1 ATTN AMSTA IM-MC  
1 ATTN AMSTA IM-MT  
WARREN MI 48397-5000

PROGRAM MANAGER  
ABRAMS TK SYS  
1 ATTN SFAE-ASM-AB  
WARREN MI 48397-5000

PROGRAM MANAGER  
1 BRADLEY FIGHTING VEH  
ATTN SFAE-ASM-BV  
WARREN MI 48397-5000

1 PROGRAM MANAGER  
FAM MED TACT VEH  
ATTN SFAE-TWV-FMTV  
WARREN MI 48397-5000

CDR APC  
1 ATTN SATPC Q  
1 ATTN SATPC QE (BLDG 85 3)  
NEW CUMBERLAND  
PA 17070-5005

CDR ARMY TECOM  
1 ATTN AMSTE TA R  
1 ATTN AMSTE TC V  
1 ATTN AMSTE EQ  
APG MD 21005-5006

PS MAGAZINE DIV  
1 ATTN AMXLS PS  
DIR LOGSA  
REDSTONE ARSENAL  
AL 35898-7466

DIR  
ARMY RSCH LAB  
1 ATTN AMSRL CP PW  
2800 POWDER MILL RD  
ADELPHIA MD 20783-1145

CDR ARMY NRDEC  
1 ATTN SATNC US (SIEGEL)  
1 ATTN SATNC UE  
NATICK MA 01760-5018

CDR ARMY ARDEC  
1 ATTN SMCAR CC  
1 ATTN SMCAR ESC S  
PICATINNY ARSENAL  
NJ 07808-5000

CDR ARMY DESCOM  
1 ATTN AMSDS MIN  
1 ATTN AMSDS EN  
CHAMBERSBURG PA 17201-4170

CDR TRADOC  
1 ATTN ATCD SL5  
INGALLS RD BLDG 163  
FT MONROE VA 23651-5194

CDR ARMY FIELD ARTY SCH  
1 ATTN ATSF CD  
FT SILL OK 73503

CDR ARMY ENGR SCHOOL  
1 ATTN ATSE CD  
FT LEONARD WOOD  
MO 65473-5000

CDR  
RED RIVER ARMY DEPOT  
1 ATTN SDSRR M  
1 ATTN SDSRR Q  
TEXARKANA TX 75501-5000

CDR  
TOBYHANNA ARMY DEPOT  
1 ATTN MR PARRENT  
11 MIDWAY ROAD  
TOBYHANNA PA 18466-5086

CDR  
CRANE ARMY AMMUNITION ACTIVITY  
1 ATTN SMCCN-EDS (MR THOMAS)  
300 HIGHWAY 361  
CRANE IN 47522-5099

CDR  
NATIONAL GUARD OF NEBRASKA  
1 USPFO FOR NEBRASKA  
1111 MILITARY ROAD  
LINCOLN NE 68508-1093

<p>CDR 501ST CORPS SUPPORT GROUP DEH AREA 1 EAST (CAMP PAGE) 1 ATTN EANC-YG-CP-DEH UNIT #15002 APO AP 96208-0210</p> <p>CDR ARMY NATIONAL GUARD OF ARKANSAS 1 ATTN DM-SES (MAJ STANLEY) NORTH LITTLE ROCK AR 72118-2200</p> <p>CDR USAF NEBRASKA AIR NATIONAL GUARD 1 155TH AIR REFUELING GROUP (SMS FRERICH) 2420 WEST BUTLER AVE LINCOLN NE 68524-1897</p> <p>CDR ARMY NATIONAL GUARD OF PENNSYLVANIA 1 STATE SURFACE MAINTENANCE OFFICE BLDG 9-68 FORT INIANTOWN GAP ANNVILLE PA 17003-5002</p> <p>CDR US ARMY ENGINEERING CENTER AND FORT LEONARD WOOD 1 ATTN ATZT-DL-M (MR BUCKINGHAM) FORT LEONARD WOOD MO 65473-5000</p> <p>CDR NEW JERSEY AIR NATIONAL GUARD 1 108TH ARW/LGQ (MSG MILLER) 33-22 FLEBELKORN ROAD MCGUIRE AFB, NJ 08641-5406</p> <p>CDR FORT SAM HOUSTON 1 ATTN AFZG-DL-MO (MR ROGERS) 2107 17TH STREET FORT SAM HOUSTON TX 78234-5036</p> <p>CDR ALASKA ARMY NATIONAL GUARD 1 ATTN AKNG-ARL-SMM (MAJ DEWAN) P.O. BOX 5800 FORT RICHARDSON ALASKA 99505-5800</p> <p>CDR 4TH SPECIAL OPERATIONS SUPPORT COMMAND 1 ATTN APSO (CPT SEABAUGH) FORT SHAFTER HAWAII 96858-5435</p> <p>CDR THE SOUTH DAKOTA ARMY NATIONAL GUARD 1 ATTN SDCLO (LTC SLY) 2823 WEST MAIN STREET RAPID CITY SOUTH DAKOTA 57702-8186</p> <p>CDR BRADLY AIR NATIONAL GUARD 1 103 CAM SQUADRON (MR FITZPATRICK) 100 NICHOLSON ROAD EAST GRANBY CT 06026-5000</p> <p>CDR US ARMY MUNITIONS AND CHEMICAL COMMAND 1 ATTN SMCRI-QAM-S (MR MAEHR)</p>	<p>ATTN SMCRI-DLD (MR CRAM) ROCK ISLAND IL 61299-6000</p> <p>CDR KENTUCKY ARMY NATIONAL GUARD 1 ATTN KG-DOM (MR DUNAWAY) 100 MINUTEMAN PARKWAY FRANKFORT KY 40601-6168</p> <p>CDR NEBRASKA ARMY NATIONAL GUARD AVIATION SUPPORT FACILITY 1 BLDG 624 LMAP (CW3 MCKLEM) LINCOLN NE 68524-1898</p> <p>CDR MISSISSIPPI NATIONAL GUARD MAINTENANCE SHOP 1 MATES BLDG 6800 (MR FARVE) 1 SHOP #1 (MAJ PYLANT) CAMP SHELBY MS 39407-5500</p> <p>CDR 10TH DIVISION SUPPORT COMMAND 1 HQ 10TH FORWARD SUPPORT BATTALION (CPT MECCA) 1 HQ E CO 25TH AVIATION (SGT HEAD) 1 HQ B CO MSB (CW2 PHIPPS) FORT DRUM NY 13602</p> <p>CDR HQ US ARMY ALASKA FORT RICHARDSON (MR PENYAK) 1 600 Richardson Drive #5000 Fort Richardson Alaska 99505-5000</p> <p>CDR OREGON AIR NATIONAL GUARD 1 142 MAS (MR KOHL) 1 142 MAS ANG (MR SMITH) 1 142 MAS SQ/MAFAG (MR. KUTCHER) 1 142 MAS/MAWR (MR. BECKER) 6801 NE CORNFOT AVE PORTLAND OR 97218-2797</p> <p>CDR NEW HAMPSHIRE NATIONAL GUARD 1 US PROP &amp; FISCAL OFFICE PO BOX 2003 CONCORD NH 03202-2003</p> <p>CDR IOWA NATIONAL GUARD 1 EMC-C CAMP DODGE (MR SHROYER) 1 GS MAINTENANCE CO (MR DAVIS) 7700 NW BOAVER DR JOHNSON IA 50131-1902</p> <p>CDR TRADOC G4/DOL MAINTENANCE DIVISION 1 ATTN ATZK DLM FORT KNOX KENTURCKY</p> <p>CDR TRADOC DG/G5 MAITENANCE DIVISION 1 ATTN ATZK DLM (MR HAM)</p>
--	---

FORT KNOX KENTUCKY

CDR  
HQ US ARMY AVIATION & TROOP COMMAND  
MAINTENANCE DIRECTORATE  
1 ATTN AMSAT-1-MEP  
4300 GOODFELLOW BLVD  
ST LOUIS MO 63120-1798

CDR  
CORPUS CHRISTI ARMY DEPOT  
DIR COMP PDN, WAV/COMM DIV  
1 CODE: 5WL5, STOP 90 (Mr. Torres)  
CORPUS CHRISTI, TX 78419-5260

CDR  
PENNSYLVANIA ARMY NATIONAL GUARD  
1 AVIATION SUPPORT FACILITY  
125 GOODRIDGE LANE  
WASHINGTON PA 15301-0020

CDR  
1 DELAWARE ARMY NATIONAL GUARD  
ORGANIZATION MAINTENANCE SHOP #5  
(MR BAKER)  
RD 2 BOX 214C  
DAGSBORO DELAWARE 19939-98021

CDR  
WASHINGTON ARMY NATIONAL GUARD  
1 MILITARY DEPARTMENT (MR DOSLAND)  
CAMP MURRAY  
TACOMA WASHINGTON 98430-5000

CDR  
1 FLEET ACTIVITIES CHINHAE  
PSC 479 (MR HENDERSON)  
FPO-AP 96269-1100

CDR  
WISCONSIN ARMY NATIONAL GUARD  
1 ATTN WIAR-F (MS NICHOLLS)  
PO BOX 14587  
MADISON WI 53714-0587

CDR  
1 SOUTH DAKOTA AIR NATIONAL GUARD  
114FG LGQ (MSGT KREULEN)  
1201 W ALGONQUIN ST  
PO BOX 5044  
SIOUX FALLS SD 57117-5044

CDR  
1 MASSACHUSETTS AIR NATIONAL GUARD  
104TH FIGHTER GROUP (SMSGT SANVILLE)  
BARNES MUNICIPAL AIRPORT  
WESTFIELD MA 01085-1385

CDR  
1 ARIZONA ARMY NATIONAL GUARD  
FACILITIES MANAGEMENT OFFICE (CPT GILMAN)  
5636 EAST MCDOWELL ROAD  
BUILDING 331  
PHOENIX AZ 85008-3495

CDR  
1 ARKANSAS AIR NATIONAL GUARD  
189 AG/MAFA (MR WILLIAMS)  
4600 VANDENBERG BLVD  
LITTLE ROCK AFB AR 72099-5065

CDR  
MONTANA ARMY NATIONAL GUARD  
1 DIRECT SUPPORT COBINED MAINTENANCE  
SHOP (MR SMITH)  
PO BOX 4789  
HELENA MT 59604-4789

CDR  
127TH F.W. SELFRIDGE ANGB  
1 ATTN MR NOWICKI  
MT CLEMENS MI 48045

CDR  
1 U.S. Army Aberdeen Test Center  
ATTN: STEAC-EV (Mr. Bill Newton)  
400 Collieran Road  
Aberdeen Proving Ground, MD 21005-5059

CDR  
1 Army Atlanta Contracting Center  
ATTN: AFLG-PRC (Ms. Williams)  
Bldg 130  
ANDERSON WAY, FT. MCPHERSON, GA  
30330-6000

CDR  
1 7th ARMY TRAINING COMMAND  
AMC-FAST SCIENCE AND TECHNOLOGY  
ADVISOR (Mr. Rees)  
ATTN: AEAGX-SA, APO AE 09014

CDR  
1 III CORPS  
ATTN: AFZF-GL-T (Mr. Holley)  
BLDG. 1001 ROOM C325  
FT. HOOD, TX 76544-5056

CDR  
1 1 CORPS & FORT LEWIS  
ATTN: AFZH-DEQ, MS17C (Ms. Trout)  
FT. LEWIS, WA 984-5000

**DEPARTMENT OF THE NAVY:**

CDR  
1 NAVAL RSCH LABORATORY  
ATTN CODE 6176 (R. MOWERY)  
4555 OVERLOOK AVENUE, SW  
WASHINGTON DC 20032

CDR  
1 NAVAL SEA SYSTEMS CMD  
ATTN SEA 03M3  
2531 JEFFERSON DAVIS HWY  
ARLINGTON VA 22242-5160

CDR  
1 NAVAL SURFACE WARFARE CTR  
CARDEROCK DIVISION  
ATTN CODE 632 (MS Wenzel)  
1 ATTN CODE 859  
9500 MACARTHUR BLVD.  
WEST BETHESDA, MD 20817-5700

CDR  
NAVAL AVIATION DEPOT  
MATERIAL ENGINEERING

2 CODE: 4.3.4.2 (Ms. Grant)  
PSC Box 8021  
CHERRY POINT, NC 28533-0021

CDR  
NAVAL STATION MAYPORT  
2 CODE: N4E9 (Mr. Tierney)  
SCE ENVIRONMENTAL  
P.O. BOX 280067  
MAYPORT, FL 32228-0067

CDR  
NSWCCD  
1 CODE 631 (MR LUNDY)  
US NAVAL BASE BLDG 619  
PHILADELPHIA, PA 19112-5083

CDR  
NAVAIR AIR  
1 4.3.4JEM (MR MULLER)  
1421 JEFFERSON DAVIS HIGHWAY  
ARLINGTON, VA 22243

CDR  
Naval Aviation Depot North Island  
Bldg 469, Materials Engineering Lab  
1 Code: 434  
San Diego, CA 92135-7058

CDR  
NAVSEA  
1 CODE: 07E21 (Mr. Adams)  
2531 JEFFERSON DAVIS HIGHWAY  
ARLINGTON, VA 22242

CDR  
NAWC WARMINSTER  
1 CODE: 4.3.4.1 (Mr. Bevilacqua)  
WARMINSTER, PA 18974-0591

CDR  
NAVAL AVIATION DEPOT, MCAS  
1 CODE: 4.3.4.2 (Mr. Cahoon)  
BLDG. 4032  
CHERRY POINT, NC 28533

CDR  
NAVY ENVIRONMENTAL HEALTH CENTER  
1 2510 WALMER AVE (Mr. Drewyer)  
NORFOLK, VA 23513-2617

CDR  
NAVAL WARFARE SYSTEMS COMMAND  
1 CODE: 10-11E (Mr. Gentilcore)  
2451 CRYSTAL DRIVE  
ARLINGTON, VA 22245-5200

CDR  
COMNAVSURFLANT  
1 Code: N411D  
1450 MITSCHER AVE.  
NORFOLK, VA 23551-2494

CDR  
NSWCCD  
1 Code 1413 (Mr. Kollar)  
PHILADELPHIA Naval BASE  
PHILADELPHIA, PA 19112

CDR

NAVSEA  
1 CODE: 00T4 (Dr. McCray)  
2531 JEFFERSON DAVIS HIGHWAY  
ARLINGTON, VA 22242

CDR  
NAVAIR  
1 CODE: 3.6.1.2 (Mr. Quist)  
1421 JEFFERSON DAVIS HIGHWAY  
ARLINGTON, VA 22243

CDR  
NADEP JACKSONVILLE  
1 CODE: 343 (Rossi)  
NAS  
JACKSONVILLE, FL 32212-0016

CDR  
NSWCCD  
1 CODE 631 (Ruparelia)  
BLDG. 619  
PHILADELPHIA, PA 19112-5083

CDR  
NAVY SPCC  
1 CODE: 0541.5 (Mr. Sieger)  
5450 CARLISLE PIKE  
MECHANICSBURG, PA 17055-0788

CDR  
NAVAL SEA SYSTEMS COMMAND  
1 CODE: sea 00TB  
2531 JEFFERSON DAVIS HWY.  
ARLINGTON, VA 22242-5160

#### **DEPARTMENT OF THE NAVY/U.S MARINE CORPS:**

1 PROG MGR COMBAT SER SPT  
MARINE CORPS SYS CMD  
2033 BARNETT AVE STE 315  
QUANTICO VA 22134-5080

CDR  
MARINE CORPS LOGISTICS BA  
1 ATTN CODE 837  
1 ATTN CODE 883  
814 RADFORD BLVD  
ALBANY GA 31704

CDR  
BLOUNT ISLAND CMD  
1 ATTN CODE 922/1  
JACKSONVILLE FL 32226-3404

CDR  
MARINE CORPS LOGISTICS BA  
1 ATTN CODE B880 (MR MSRTTEL)  
BARSTOW CA 92311-5015

#### **DEPARTMENT OF AIR FORCE:**

1 AIR FORCE WRIGHT LAB  
ATTN WL/POSL  
1790 LOOP RD N  
WRIGHT PATTERSON AFB

OH 45433-7103

1 AIR FORCE WRIGHT LAB  
ATTN WL/MLBT  
2941 P ST STE 1  
WRIGHT PATTERSON AFB  
OH 45433-7718

1 AIR FORCE WRIGHT LAB  
ATTN WL/MLSE  
2179 12TH ST STE 1  
WRIGHT PATTERSON AFB  
OH 45433-7718

1 WR ALC/LVRS  
225 OCMULGEE CT  
ROBINS AFB  
GA 31098-1647

**DEPARTMENT OF DEFENSE:**

DEFENSE SUPPLY Center Richmond  
1 ATTN DSCR SSA  
1 ATTN DSCR STA  
8000 JEFFERSON DAVIS HWY  
RICHMOND VA 23297-5000

1 DEFENSE TECH INFO CTR  
8725 JOHN J. KINGMAN RD.  
SUITE 0944  
FORT BELVOIR VA 22060-6210